




Leaf-B-Gone™ Quick Reference Guide Operation/Maintenance

The Leaf-B-Gone in-floor cleaning system uses clean, filtered water to clear dirt and debris from swimming pools and spas. Utilizing the pull created by a high-pressure venturi nozzle inside the canister, the Leaf-B-Gone draws leaves and debris from the pool bottom through a plumbing line connected to the Leaf-B-Gone floor canister. Clean water is returned to the pool through a specialized fitting that directs flow to improve pool skimmer efficiency.

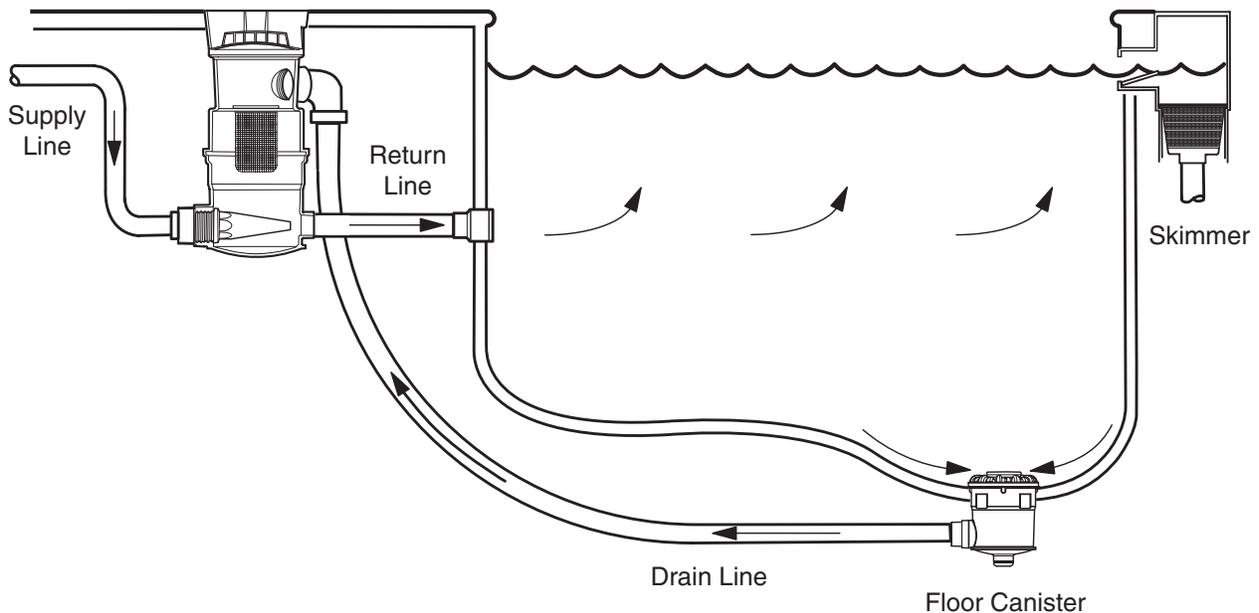

Operation

Starting the System

The Leaf-B-Gone system is activated whenever the pool pump is turned on.

- If a valve is installed on the Leaf-B-Gone supply line, it should be fully open.

Adjusting the Discharge Flow

The louvered fitting on the Leaf-B-Gone return line can be adjusted to direct water flow.


To optimize cleaning, position the fitting to discharge water towards the skimmer.

Adjusting the Floor Canister

The floor canister post extends approximately 1/4" above the cover of the drain at installation.

To adjust the post height, use the Head Removal Tool (part# 3-17-8) attached to the end of a pool service pole.

- Insert the tabs of the tool into the slots on the drain post.
- Turn counterclockwise to raise the drain for larger debris like leaves or clockwise to lower it.

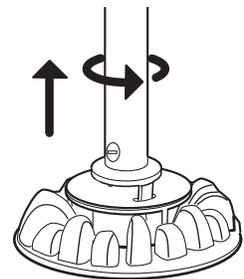


Maintenance

To optimize system performance and maintain a clean pool, routinely clean the pool filter, pump basket and Leaf-B-Gone™ filter bag.

Turn off the pool pump to turn off Leaf-B-Gone system before performing maintenance.

Cleaning the Leaf-B-Gone Filter Bag

1. Remove the deck lid and inner lid.
2. Remove bag, turn inside out and flush with water.
3. Drop bag back into place.
4. Turn on pool pump to activate Leaf-B-Gone. The water inside the canister will automatically drain down into the pool. Replace the inner lid and deck lid.

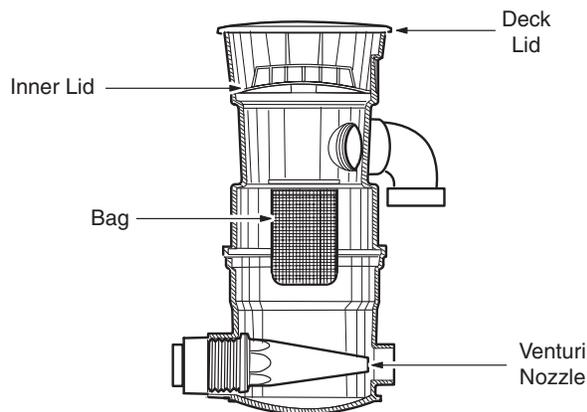

Cleaning the Nozzle

1. Remove deck lid, inner lid and filter bag.
2. Turn nozzle counter-clockwise to remove. Check nozzle for debris and clean as necessary.
3. With nozzle off, turn on pool pump and flush nozzle line for thirty (30) seconds.
4. Reinstall nozzle, filter bag, inner lid and cover.

Removing Stagnant Water from Above the Inner Lid


If water accumulates above the inner lid, remove lid and turn on system to drain water into the pool. Reinstall the lid. **Water must be kept below inner lid in areas prone to freezing.**

Winterizing

To avoid freeze damage in cooler climates, it is necessary to winterize the Leaf-B-Gone system. **We recommends that a qualified technician be used to winterize this equipment.**

To winterize:

1. Remove deck lid, inner lid and filter bag.
2. Remove the return line wall fitting and replace it with a winterizing plug.
3. Clear all water from the canister. Use compressed air to blow out the drain line. Install a winterizing plug in the drain line fitting.

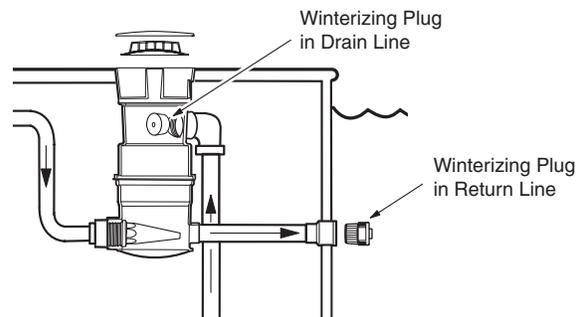

4. Close the valve at the pool equipment. Open the tee in the supply line and blow out the line.
5. Vacuum any remaining water from the canister. To prevent freeze damage from rain water, put antifreeze (propylene glycol only) in the bottom of the canister. Secure the inner lid and add more antifreeze.
6. Reinstall the deck lid and store the filter bag in a dry protected location.